

SD-100A

Advanced Trainer w/tone-training feature

1. Set Up Transmitter: Turn collar off
Insert 12v battery positive side up
2. ID Code: 2048
Press and hold Program (on back of transmitter).
Press and hold Button 1
Release Program only → red / green light → light out
Release Button 1
(Blinking red light on transmitter = error; start over and suggest the user hold the buttons longer before releasing)

1-5
Press and hold Program (on back of transmitter)
Press and hold Button 1
Release Program only → red / green → light out → solid yellow
Release Button 1

Press nothing	=	1	ID Code
Press 1	=	2	
Press 2	=	3	
Press 3	=	4	
Press 4	=	5	
3. Select Tone: Press and hold Program
Press and hold Button 2 = Tone
3 = No Tone
4 = Delay
Release Program only → solid light → light out
Release Button 2, 3, or 4
(Blinking red light on transmitter = error; start over and suggest the user hold the buttons longer before releasing)
4. Set-Up Collar: Insert 6v alkaline battery positive side up.
5. Synchronize: Hold red paper dots together → green light → out → yellow light
Separate components 1 foot → blinking yellow light on collar
Press Button 1 → pulsating red light on collar
Release Button 1 → blinking green light on collar

SD-100A Features

- Batteries:** Transmitter uses 12v alkaline (part # BAT-012) Battery life = 2-3 months
Collar uses 6v alkaline (part # BAT-001) Battery life = 75-100 hrs of use
- Collar:** Battery replaceable and water resistant
Collar measures 2" wide x 1.5" tall x 1" thick and weighs less than 3 oz.
Low battery indicator is blinking red light
Nylon strap
Battery screw cap and o-ring is included in the RK-12
- Collar Lights:** Green blinking = On and ready
Yellow blinking = Programming mode
Red pulsating = Stimulating
Red blinking = Low battery
Yellow pulsating = Low battery
- Range:** 150 yards in flat, open terrain
- Stimulation:** Preset: Low, medium, medium high, and high
- Transmitter:** Transmitter is water-resistant and controls one collar
Transmitter measures 3.5" tall x 1.75" wide x 0.625" thick
Low battery indicator is pulsating red light on transmitter
Battery plug = 1700112-1
- Trans lights:** Green pulsating = Activating
Yellow light = Programming Mode
Red pulsating = Low battery
- Video-52:** Dog Star video

SD-100A Troubleshooting Tips

Walk through programming and synchronization

Check transmitter battery for proper type, size, and position.

Collar will not turn on or off with transmitter: Try another magnet with the collar.

Collar will not synchronize: Check/change batteries
Reprogram the remote, and try to synchronize it to collar

Good dog / Bad dog tones do not work: Check/change batteries.
Reprogram the remote, and synchronize to collar
If still not tones, contact Innotek.

Collar will not deliver stimulation: Re-synchronize and check → no stimulation → Contact Innotek

Collar has a solid red light: Remove battery; check voltage of battery
Replace battery if voltage is low.
Replace Collar if battery voltage is good.

Losing programming: Check for contact with other magnets, or metal.