

FS-25A

Basic Remote Trainer, Rechargeable

1. Set up Transmitter: Turn collar off.
2. Stimulation Level: Select one of 7 levels using Switches 1, 2, and 3

<u>Stim</u>	<u>1</u>	<u>2</u>	<u>3</u>
Level 1	Down	Up	Up
Level 2	Up	Down	Up
Level 3	Down	Down	Up
Level 4	Up	Up	Down
Level 5	Down	Up	Down
Level 6	Up	Down	Down
Level 7	Down	Down	Down

3. Tone Option: Tone with stimulation: Switch 4 Up and Switch 5 Down
No Tone: Switch 4 Up and Switch 5 Up
Tone with delay: Switch 4 Down and Switch 5 Down

4. ID Code: Change ID code using Switches 6, 7, and 8
Re-synchronize

5. Synchronize: Remove collar from charger → blinking yellow light on collar
Hold transmitter 1 foot away and press button → pulsating red light
Release transmitter button → blinking green light on collar

or

Hold red paper dots together → green light → out → yellow light
Separate components 1 foot → blinking yellow light on collar
Press transmitter button → pulsating red light on collar
Release transmitter button → blinking green light on collar

Free Spirit FS-25A Features

- Adapter: 12v 200 mAmps (part # 0400012) DC Preferred
- Batteries: Transmitter uses 12v alkaline (Part # BAT-012) Battery life = 2 months
Full charge on collar takes 12 hours and lasts up to 70 hours of use.
- Collar: Battery rechargeable and waterproof
Collar measures 2" wide x 1.5" tall x 1.25" thick and weighs 5 oz.
Low battery indicated by blinking red light on collar.
Nylon strap
- Collar lights: Green blinking = On and ready
Yellow blinking = Programming mode
Red pulsating = Stimulating
Red blinking = Low battery
Solid red = Charging
- Probes: Included in the RK-11
- Range: Up to 250 yards in flat, open terrain
- Stimulation: Select from Levels 1-7
Side switch (toward antenna) boosts stimulation 2 levels
- Transmitter: Transmitter is water-resistant and weighs 1 oz.
Transmitter measures 1.5" wide x 2" tall (3.75" including antenna) x 0.7" thick
Side switch boosts stimulation 2 levels
- Trans light: Solid red light = Activating
- VIDEO-52 Dog Star Training

Free Spirit FS-25A Troubleshooting Tips

Walk through programming and synchronization.

Check the transmitter battery for type, size, and position.

Check the charge on the collar.

Collar will not turn on or off with transmitter: Try another magnet with the collar.

Collar will not synchronize: Check the battery in the transmitter.
Check position of switches.

Collar will not deliver stimulation : Re-synchronize and check → no stimulation → Contact Innotek

Collar has solid red light: Place collar on charger for 5 min → light out → recharge collar
light on → try to resynchronize
If it does not synchronize →
Contact Innotek

Collar not taking charge: Check adapter and outlet

Collar not holding charge: Drain collar completely and recharge 14-16 hours

Losing programming: Check for contact with other magnets, or metal on dog.

Metal collar: Short across the probes, turn the collar on or off.