

## SD-70 Lap Dog Trainer

1. Set Up Transmitter: Turn collar off  
Insert 12v battery positive side out
  
2. ID Code: 2048  
Press and hold Program (on back of transmitter).  
Press and hold Button 1  
Release Program only → red / green light → light out  
Release Button 1  
(Blinking red light on transmitter = error; start over and suggest the user hold the buttons longer before releasing)  
  
1-5  
Press and hold Program (on back of transmitter)  
Press and hold Button 1  
Release Program only → red / green → light out → solid yellow  
Release Button 1  
Press nothing = 1 ID Code  
Press 1 = 2  
Press 2 = 3  
Press 3 = 4  
Press 4 = 5
  
3. Select Tone: Press and hold Program  
Press and hold Button 2 = Tone  
3 = No Tone  
4 = Delay  
Release Program only → solid light → light out  
Release Button 2, 3, or 4  
(Blinking red light on transmitter = error; start over and suggest the user hold the buttons longer before releasing)
  
4. Set-Up Collar: Insert 2 3 volt Lithium coin cell batteries positive side up.  
(if new, batteries come installed from factory)
  
5. Synchronize: Turn collar on (turn battery cap clockwise) →  
Hold within a foot of the transmitter. →  
Press GOOD tone button on the transmitter.

## SD-70 Features

Batteries:	Transmitter uses 12v alkaline Collar uses 2 (CR2032) 3 volt lithium coin cell	Battery life = 2-3 months Battery life = 360 hrs of use
Collar:	Battery replaceable and waterproof Collar measures 1.88 x 1.28 in x 1.17 in Nylon strap 1700165-14 Battery screw cap - RK-18 (also includes batteries)	
Probes:	Comes installed with Short probes and has offset probes for dogs with narrow necks  To install offset probes: use pliers to loosen and remove short probes. Use Phillips screwdriver to screw offset probes on.  Long probes are available in the RK-17	
Range:	70 yards (200 ft) in flat, open terrain	
Stimulation:	Preset: Low, medium, high, and max Transmitter is water-resistant and controls one collar Transmitter measures 3.5" tall x 1.75" wide x 0.625" thick Battery plug = 1700112-1	
Transmitter:	Transmitter is water-resistant and controls one collar Transmitter measures 3.5" tall x 1.75" wide x 0.625" thick Low battery indicator is pulsating red light on transmitter Battery plug = 1700112-1	
Trans lights:	Green pulsating = Activating Yellow light = Programming Mode Red pulsating = Low battery	
DVD	4 in 1 DVD	

## SD-70 Troubleshooting Tips

Check transmitter battery for proper type, size, and position.  
Walk through programming and synchronization

Collar will not synchronize:  
(programming remote)      Check batteries, reprogram. (Collar has to be turned off when  
Still does not synchronize → replace both

Collar will not deliver stim:      Re-synchronize and check  
Check tightness of probes  
If still no stim on test light, replace collar

Collar will not deliver a tone      Check batteries  
Reprogram and Resynchronize → no tone → Replace  
both

Low range      Check batteries and reprogram  
Still low range → replace both.

Metal on dog:      Short across probes and not allow stimulation to go to the dog