

# FS-15

## Basic Remote Trainer

1. Set up Transmitter: Turn collar off.
2. Stimulation Level: Select one of 7 levels using Switches 1, 2, and 3

<u>Stim</u>	<u>1</u>	<u>2</u>	<u>3</u>
Level 1	Down	Up	Up
Level 2	Up	Down	Up
Level 3	Down	Down	Up
Level 4	Up	Up	Down
Level 5	Down	Up	Down
Level 6	Up	Down	Down
Level 7	Down	Down	Down

3. Tone Option: Tone with stimulation: Switch 4 Up and Switch 5 Down  
No Tone: Switch 4 Up and Switch 5 Up  
Tone with delay: Switch 4 Down and Switch 5 Down
4. ID Code: Change ID code using Switches 6, 7, and 8  
Re-synchronize
5. Synchronize: Hold red paper dots together → green light → out → yellow light  
Separate components 1 foot → blinking yellow light on collar  
Press transmitter button → pulsating red light on collar  
Release transmitter button → blinking green light on collar

## Free Spirit FS-15 Features

- Batteries:** Transmitter uses 12v alkaline ( Part # BAT-012) Battery life = 2 months  
Collar uses 6v alkaline (Part # BAT-001) Battery life = up to 60 hours of use
- Collar:** Battery replaceable and water resistant  
Collar measures 2" wide x 1.5" tall x 1" thick and weighs less than 3 oz.  
Low battery indicated by blinking red light on collar.  
Red reflective strap (1700458-6)  
Battery screw caps and o-ring available in the RK-12.
- Collar lights:** Green blinking = On and ready  
Yellow blinking = Programming mode  
Red pulsating = Stimulating  
Red blinking = Low battery  
Yellow pulsating = Low battery
- Probes:** included in the RK-11
- Range:** 150 yards in flat, open terrain
- Stimulation:** Select from Levels 1-7  
Side switch (toward antenna) boosts stimulation 2 levels
- Transmitter:** Transmitter is water-resistant and weighs 1 oz.  
Transmitter measures 1.25" wide x 2" tall (3.5" incl antenna) x 0.5" thick  
Side switch boosts stimulation 2 levels
- Trans light:** Solid red light = Activating
- Video-52** Dogstar Training

## Free Spirit FS-15 Troubleshooting Tips

Walk through programming and synchronization.

Check the batteries for type, size, and position.

Collar will not turn on or off with transmitter:      Try another magnet with the collar.

Collar will not synchronize:                              Check the batteries in each component.  
Reprogram remote and try to synchronize

Collar will not deliver stimulation :              Re-synchronize and check → no stimulation → Contact  
|    Innotek

Losing programming:                              Check for contact with other magnets, or metal on the dog.

Metal collar:    Shorts across the probes, turn the collar on or off.