

Automatic NO-BARK TRAINING COLLAR

CKB-50

Operation Guide



Automatically adapts to stop nuisance barking

Thank you and congratulations for purchasing this K-9 No-Bark Collar by Innotek®.

This electronic dog collar is among the safest, most humane and effective training products you can buy. Used properly, the collar's electronic correction serves as a distraction that your dog will find undesirable. By ceasing his nuisance barking, your dog quickly learns to shut off the correction.

Please take a few minutes to read this Operation Guide prior to your first use. These instructions contain important programming and set-up information to help your training proceed as successfully as possible. For best results, follow these important rules:


IMPORTANT SAFEGUARDS

1. Obey all warnings contained in this manual.
2. The electronic dog collar is intended only for use on dogs. Never attempt to use this product for any purpose not specifically described in these instructions.
3. Use of the No-Bark Collar assumes your dog is healthy, both mentally and physically. If you have any reason to believe the dog may pose a danger to others, harm itself, or react adversely after receiving a stimulation from the No-Bark Collar, do not use this product to quiet your dog.
4. DO NOT leave the collar on your dog for more than 12 hours per day, or when you are away from home (See 'Caution: Check your dog's skin' on page 2).
5. NEVER perform set-up procedures when the collar is on your dog.
6. Test the No-Bark Collar prior to first use or after changing any settings to ensure that the unit is operating properly.
7. A low battery charge may cause intermittent operation. DO NOT USE if you suspect a low battery.
8. An electronic collar should only be used under close supervision by the dog's owner.
9. Your dog will not respond to the No-Bark Collar unless:
 - The No-Bark Collar has a fresh battery.
 - The No-Bark Collar is worn properly by the dog.
 - The No-Bark Collar is adjusted so that the probes touch your dog's skin.
 - The No-Bark Collar is positioned on your dog's neck an inch above or below the dog's vocal cords.
10. Realize that because individual dogs have unique temperaments, there is no way of knowing how your dog will react to its introduction to the No-Bark Collar. Also realize that an aggressive animal could turn against the handler upon receiving the correction. If your dog has a history of aggressive temperament or behavior, always consult a certified animal behaviorist before using this product. Please refer to the Helpful Hints and Training Guide section before proceeding.

11. Read all instructions before using this product. If you have any questions or concerns, phone Innotek at 800-826-5527.
12. KEEP OUT OF THE REACH OF CHILDREN.

COMPONENTS

Before you begin, please take a few moments to become familiar with the basic components and their functions.

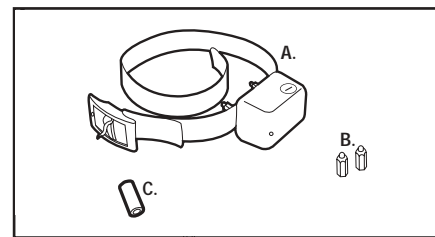

- A.** Collar Receiver - Attached to a collar strap, this small box contains the circuitry that delivers the stimulation to your dog. This water-resistant collar receiver is powered by a 6-volt alkaline battery.
- B.** Stimulation Probes -The two probes a) detect the vibration of your dog's bark and b) deliver the stimulus. Two sets of stimulation probes are included so you can use the collar with dogs of varying coat thickness.
- C.** 6-volt Alkaline Battery - The power source for the battery replaceable collar receiver.

This Innotek No-Bark Collar is designed to meet requirements set forth by U.S. and European country telecommunications authorities. Note that in some countries, use may be limited, due to national frequency planning requirements. The user is responsible for respecting those rules.

HOW THE INNOTEK AUTOMATIC NO-BARK COLLAR WORKS

Dogs bark. It's one of the natural ways they communicate. However, excessive or pointless barking is annoying to you and your neighbors, and that's where an Innotek No-Bark Collar can help.


When used according to instructions, the Innotek No-Bark Collar automatically detects barking and discourages it by delivering a brief, harmless electronic correction. Since it senses the vibrations produced by the dog's vocal cords, the No-Bark Collar is activated only by the bark of the dog that is wearing the collar.

Unlike other anti-bark collars, the Innotek No-Bark Collar has no awkward switches or dials. Just power it up and put it on your dog according to instructions. That's it. It'll do the rest all by itself. (With a little help from your dog, of course!)

Your new Innotek No-Bark Collar features seven stimulation levels, Level 1 being the lowest, Level 7 the highest. With our patented* Auto-Set technology, the No-Bark Collar automatically sets itself at the appropriate stimulation level that quiets your dog. It also gives the dog a two-second "learning timeout" between stimulations. This learning timeout prevents

excessive stimulation, and it also gives your dog time to learn at its own pace.

Here's how it works. (We'll assume that you've already read these operating instructions thoroughly and that the No-Bark Collar is properly positioned on your dog.) When your dog first barks, he receives a Level 1 stimulation. A two-second learning timeout follows, to give your dog a chance to associate the bark with the stimulation. If your dog barks again, he will receive a Level 2 stimulation, followed by another timeout. The collar's Auto-Set design automatically increases the stimulation through as many as seven levels until your dog stops barking.

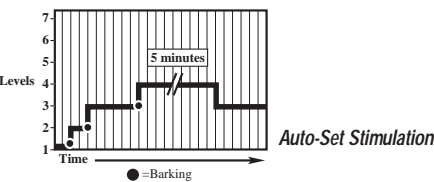


The Innotek No-Bark Collar is designed to protect your dog from over-stimulation. Let's say that your dog stops barking after receiving a Level 4 stimulation. After a 5-minute bark-free period, the No-Bark Collar automatically sets the next stimulation back one level, in this case Level 3, (one level below the highest level previously reached). At its next bark, the dog would receive a Level 3 stimulation, a "warning level" that it should recognize.

The Auto-Set feature is fair to the dog. Should it stop barking at the warning level, it could soon wean itself down to the lowest level of stimulation. If it barks through the warning level, the stimulation will increase to higher levels until the dog stops barking. Your dog will soon learn that the best way to avoid stimulation is to stay quiet. (Some dogs learn faster than others, so be patient.) Used properly, the No-Bark Collar will quickly quiet your companion of nuisance barking.

Sometimes you want your dog to be able to bark, of course. If your dog has a protective role in your home, simply take the No-Bark Collar off him when you want him to be free to bark.

STEP 1 Adjust the Collar Strap to Your Dog's Neck.

Before inserting the battery, adjust the collar so it correctly fits your dog.

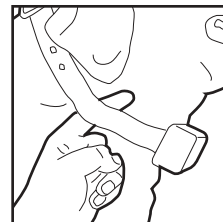

Proper Fit: The collar strap fit should be snug, yet loose enough to allow one finger to fit between the strap and dog's neck.

1. Use short probes for short-haired dogs; use long probes for long-haired or thick-coated dogs.
2. Place the collar around the dog's neck, so the receiver box is under its chin.
3. The probes should be one inch above or below the dog's Adam's Apple. This is where vibration from the vocal cords can best be detected.

4. Fit the collar strap as snugly as possible, without restricting breathing. You should be able to fit just one finger between the strap and your dog's skin. Make sure both probes contact the dog's skin.
5. If your dog has a small neck size, you may wish to trim the excess strap length. Remove the collar from your dog, and trim the excess, leaving 4-6 inches (if desired). To prevent fraying of the nylon strap, carefully singe the end with a lit match.
6. **NOTE:** An improper loose fit is the #1 troubleshooting issue among owners of No-Bark Collars. The collar strap must be very snug on your dog's neck. Make collar adjustments until you are satisfied with the fit, before inserting the battery.

CAUTION: Check your dog's skin

Reduce your dog's risk of developing Pressure Necrosis, a potentially serious condition caused by excessive pressure of the collar receiver probes against your dog's skin. Be sure to take the following precautions:

- Do not leave the collar receiver on your dog for more than 12 hours a day, or when you are away from home.
- Read and follow ALL instructions for use as described in this operation guide.
- Do not put the collar strap too tightly on your dog. You should be able to slide a finger between the strap and your dog's skin. If you cannot slide a finger between the strap and your dog's skin, loosen the strap until you can.
- Examine your dog's neck daily for signs of irritation or discomfort. If you observe any unusual conditions such as redness, tenderness, or raw skin, discontinue use of the product for 48 hours. If the condition persists, consult your veterinarian.
- Wipe the collar receiver probes and your dog's neck daily with a damp cloth and mild hand soap. Wipe thoroughly and dry completely. Note CKB-50 is not waterproof; never submerge in water.
- If you have any questions, call Innotek at 800-826-5527.

STEP 2 Power Up

Use a coin to loosen the battery screw cap on the side of the receiver, turning it counterclockwise. Install the battery with positive (+) side up, and replace the battery screw cap.

This collar has a low battery indicator which is a blinking red light, once every 5 seconds. Replace the battery when the low battery indicator appears. When not in use for extended periods of time the battery should be removed from the collar.

STEP 3 Test the No-Bark Collar

Prior to placing the collar on your dog, test the collar for proper functioning. Make sure that the No-Bark Collar is powered up.

To test, gently rub the probe tips on a hard non-glass surface like a tabletop. A red light indicates that the unit is sensing vibration and delivering stimulation. Remember the unit must detect a 2 second quiet period before it can deliver the next stimulus; the quiet period is noted with a series of very rapid light flashes. Only when certain the collar is working properly should you place the collar on your dog.

If you successfully tested the unit and saw one red light, reset the unit now. Remove the battery, wait about one minute, then replace it. The unit must be at its baseline Level 1 for the first session.

STEP 4 Your Dog's First Session

It's important to think of your dog's first session with the collar as a calibration or alignment exercise. Remember that it may take several barks for your dog to begin detecting the level of stimulation appropriate for its temperament.

Place the collar on your dog, adjusting the fit so that the probes are one inch above or below the dog's Adam's Apple (see Step 1). Let the dog wear the collar for 30 minutes or so before introducing it to a barking distraction.

Monitor your dog carefully during this first session. Remember it may take several barks for the unit's Auto-Set feature to deliver the stimulation appropriate for your dog's tolerances and temperament. Note the unit will not increase the stimulation level or produce additional corrections unless the time between barks is at least 2 seconds. Be sure to reward your dog frequently with praise or food for not barking.

Wait at least 10-15 minutes after the last bark before removing your dog's No-Bark Collar. The unit will store the warning level described earlier. The next time you use the No-Bark Collar, your dog's first bark will yield a stimulation at its warning level.

Professional Training Support for the lifetime of your dog.

Additional behavior or training issues? Looking for the best way to discourage jumping, minimize barking, and encourage better obedience? Just call our FREE Professional Training Support hotline at 800-364-3362. Your call will be answered by a professional dog behaviorist with nationally recognized dog training consultant Dogstar Training. Your free access to the training hotline is provided by Innotek.

Visit www.partnersinbehavior.com

IMPORTANT!

- Always use the rubber insulators between the collar strap and stimulation probes to provide insulation in damp conditions.
- If needed, a small amount of hair removal or thinning will improve probe contact with the skin. Do not shave dog's neck.
- Never leave the collar on your dog for more than 12 hours a day or when you are away.
- Check your dog periodically for skin irritation.
- Check the tightness of the probes regularly to prevent loss of the receiver.

Helpful Hints and Training Guide

To get the most out of your new bark collar, please make sure to follow these steps before you begin:

Always make sure the collar is functioning properly before you put it on the dog.

Allow your dog to get used to the collar before introducing the potential for a barking incident. You want your dog to accept the collar as part of a routine, not to associate the collar with stimulation.

TROUBLESHOOTING

If the collar appears not to be working, try the following before contacting an Innotek Service Center:

- Adjust neck strap fit (#1 source of troubleshooting calls)
- Replace the 6-volt alkaline battery
- Check that the probes are tightened
- Ensure the probes are touching the dog's skin
- Trim the dog's hair or use longer probes to ensure proper skin contact. Do not shave dog's neck.

If stimulation levels appear to have risen too high for your dog's tolerances, reset the collar to Level 1 by removing the battery for 1 minute.

If you cannot solve the problem by following these instructions, please call 800-826-5527 for further instructions.

GENERAL MAINTENANCE

This product requires very little maintenance. The CKB-50B No-Bark Collar is water-resistant; never immerse it in water or you may damage the internal electronics. To remove dirt, simply wipe with soap and water. Never place the collar in a dishwasher.

Wipe the collar receiver probes and your dog's neck daily with a damp cloth and mild hand soap. Wipe thoroughly and dry completely.

Examine your dog's neck daily for signs of irritation or discomfort. If you observe any unusual conditions such as redness, tenderness, or raw skin, discontinue use of the product for 48 hours. If the condition persists, consult your veterinarian.

Do not attempt to dismantle or repair any components of this product; this will void the manufacturer's warranty in full. These components contain computerized circuitry that should be serviced only by an authorized expert.

For more information, visit our web site at www.innotek.net.



IF YOU HAVE ANY QUESTIONS ABOUT THE USE OF THIS PRODUCT, DO NOT RETURN IT TO THE PLACE OF PURCHASE. CALL INNOTEK® AT 800-826-5527 or 260-467-5000 (US). SPRING/SUMMER HOURS: MONDAY THROUGH FRIDAY 8 AM TO 5 PM, CENTRAL TIME FALL/WINTER HOURS: MONDAY THROUGH FRIDAY 8 AM TO 5 PM, EASTERN TIME



Register Your New K-9® Product

To help us better serve you, please complete the information below and mail back to us to ensure that your new Innotek product is registered. You may also register online: go to Product Registration at www.innotek.net.

First Name _____ Last Name _____

Address _____

City _____ State _____ Zip Code _____

Day Time Telephone (____) _____

Night Time Telephone (____) _____

E-Mail Address _____

Place of Purchase _____ Date of Purchase _____

Model # **CKB-50** _____ Serial # _____

Model # _____ Serial # _____

Reason for Purchase _____

Barking Running Away Chewing Obedience

Rummaging Jumping Hunting Other _____

Dog Breed _____

Age of Dog _____

Weight of Dog _____

Dog Food Brand _____

Do You Own a Cat? _____

Please check box to receive information on other fine Innotek products.

Remote Trainer Containment Systems No-Bark Collars

Sporting Dog Products Contain 'N' Train™




Quickstart Card

1. Adjust collar to fit
2. Power up
3. Test the unit
4. Reset unit
5. Put collar on dog

Be sure to read, understand, and follow all instructions and warnings in this Operation Guide.

Register Your New Innotek® Product

NO POSTAGE
NECESSARY
IF MAILED
IN THE
UNITED STATES

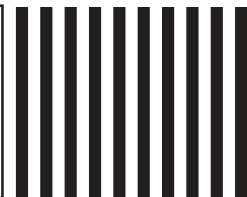

BUSINESS REPLY MAIL

FIRST-CLASS MAIL PERMIT NO. 1000 GARRETT IN

POSTAGE WILL BE PAID BY ADDRESSEE

MARKETING SERVICES

INNOTEK®

1000 FULLER DR

GARRETT IN 46738-9909



LIMITED LIFETIME WARRANTY
Innotek® warrants to the original retail purchaser that this product will be free from defects in material and workmanship, under normal use, for a period of one year from the date of the original retail purchase. If you are not satisfied with the performance of this product, please contact Innotek. Please do not return the product to your retailer. After one year from date of original consumer purchase, a prorated parts and labor schedule provides additional warranty coverage to the original retail purchaser. Please contact Innotek for details. This product is also covered by a 30-day money-back guarantee. If you are not satisfied with the performance of this product, please contact Innotek for instructions on how to return your System and receive a refund.

During the initial 12-month period, Innotek will either repair, or replace any defective components. All warranty claims are subject to a nominal processing fee. Prior to returning any component to Innotek, the purchaser is urged to call Innotek at the telephone number below to obtain instructions on returning components.

This Limited Warranty covers only the components manufactured by Innotek. Innotek neither assumes, nor do we authorize any other person to assume for us, any other liability in connection with the sale of Innotek products. The Innotek Limited Warranty shall not apply to any product that has been subject to accident, neglect, alteration, or misuse. This Limited Warranty is void if any attempts are made to alter or repair any component prior to returning it to our facility. This Limited Warranty specifically excludes lost parts or components, broken probe studs, damage as a result of dog chews, or lightning damage.

THE REMEDIES AS SET FORTH IN THIS LIMITED WARRANTY SHALL BE THE EXCLUSIVE REMEDIES AVAILABLE TO THE ORIGINAL RETAIL PURCHASER, AND INNOTEK SHALL NOT BE LIABLE OR RESPONSIBLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THE PRODUCT COVERED BY THIS LIMITED WARRANTY OR CAUSED BY ANY DEFECT, FAILURE OR MALFUNCTION OF THE SYSTEM, WHETHER A CLAIM IS BASED UPON WARRANTY, CONTRACT, NEGLIGENCE OR OTHERWISE. Some states do not allow the exclusion of incidental or consequential damages, so this limitation may not apply in your particular state. This limited warranty gives you specific legal rights, and you may have other rights which vary from state to state.

To the extent permitted by applicable law, THIS LIMITED WARRANTY SPECIFICALLY EXCLUDES ANY AND ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND/OR FITNESS FOR A PARTICULAR PURPOSE. Otherwise all implied warranties are limited in duration to one year from the date of original retail purchase. THERE ARE NO OTHER

WARRANTIES, EITHER EXPRESS OR IMPLIED, OF ANY KIND OR NATURE WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF.

This product is not a substitute for traditional obedience training. Innotek does not warrant the effectiveness of this product due to variances in canine personality, temperament and influences beyond the control of Innotek.

If a warranty claim is to be made, please call us at telephone number below to obtain a Return Materials Authorization Number (RMA) and instructions on how to return the product. Defective components or the complete product should be sent by insured U.S. mail, or UPS to the address specified below. All returns are subject to a nominal processing fee and such processing fee must be included with the returned product.

Invisible Technologies, Inc.
1000 Fuller Drive
Garrett, IN 46738
Ph: 260-467-5000
Toll Free: 800-826-5527

US Patent No.: 6,073,589 and 5,913,284


Innotek, the Innotek logo, and K-9

are registered trademarks of Invisible Technologies, Inc.

All other product and service marks are the property of their respective owners.

© 2003 Invisible Technologies, Inc. All rights reserved.

NO-BARK TRAINING COLLAR

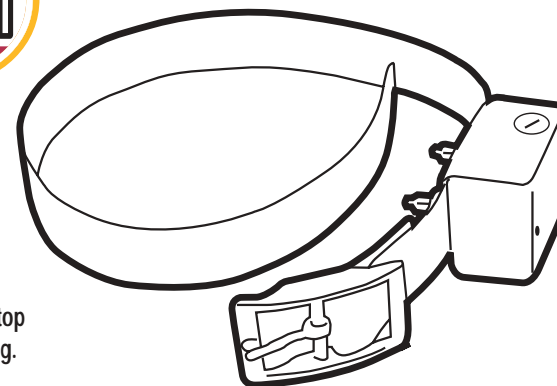

Self-adapts to stop annoying barking.

The safe, effective way to stop excessive barking

New auto-set feature monitors your dog's bark. The more the dog barks, the higher the level of correction. When the dog ceases barking, the No-Bark Collar stops at the level just right for your dog. This exclusive patented* Innotek® technology delivers immediate, effective stimulation for your dog, and is fair in reducing stimulation based on your dog's proper behavior.

- 7 levels of automatic correction
- No external programming or controls
- Activated only by your dog's barking

System includes:

- Lightweight receiver
- Easy-to-adjust nylon collar
- Short and long probe contacts, for varying coat lengths
- Complete operating instructions
- FREE Professional Training Support
- Limited Lifetime Warranty

(* patent pending. Also see U.S. Patent No. 6,073,589 and 5,913,284

Innotek and the Innotek logo are registered trademarks of Invisible Technologies, Inc. All other product or service marks are the property of their respective owners. ©2003, Invisible Technologies, Inc. All rights reserved.



7 62964 15124 1

2400257-1



NO-BARK TRAINING COLLAR



EXCLUSIVE FEATURES:

Automatically adjusts to stop your dog's annoying barking

Self-adjusting & Fair to Your Dog

CKB-50

Battery
Replaceable



Designed by

INNOTEK®

Invisible Technologies, Inc.
1000 Fuller Dr.
Garrett, Indiana 46738
USA



Invisible Technologies, Inc., 1000 Fuller Dr., Garrett, Indiana 46738 260-467-5000 Made in USA