

safety of your dog, a long lead should be used during initial training so you have control of the situation.

9. If you have reason to believe that your dog may pose a danger to others, harm itself, or react adversely to the collar, do not rely solely on this product to train your dog. If your dog shows signs of growling, snarling or biting while using the collar, stop immediately. Aggression in dogs has many causes. We recommend that you consult a knowledgeable professional dog trainer or animal behaviorist who has experience with aggressive dogs if your dog has shown any of these characteristics.
10. Occasionally, a dog cannot be trained to respond to a remote training collar. Sometimes even a properly trained dog may disobey a command. Therefore, Invisible Technologies, its distributors, and dealers cannot guarantee that the system will in all cases keep the customer's animal from disobeying commands.

WE CARE. CALL US FIRST.
1-800-826-5527

LIMITED LIFETIME WARRANTY

Invisible Technologies warrants to the original retail purchaser, that Innotek brand products will be free from defects in material and workmanship, under normal use, for a period of one year from the date of the original retail purchase. This Limited Warranty excludes: accidental damage due to dog chews; lightning damage where an INNOTEK lightning protection component is not in use (in-ground pet fencing systems); or neglect, alteration and misuse.

Invisible Technologies offers several product exchange options during the warranty period. If service is required, call 1-800-826-5527 to discuss the service plan that best serves your needs. Costs are dependent on the processing time and the desired shipping options. Please do not return this product to your retailer.

After one year from date of original retail purchase, we will repair, replace or upgrade your product at a fixed rate based on the component.

Invisible Technologies, Inc., shall not be liable or responsible for any incidental or consequential damages resulting from the use of the product or caused by any defect, failure or malfunction of the product, whether a claim is based upon warranty, contract, negligence or otherwise.

Innotek, the Innotek logo, Track & Train, and Command Series are registered trademarks of Invisible Technologies, Inc. All other product and service names are the property of their respective owners.

© 2004, Invisible Technologies, Inc.
All rights reserved



Invisible Technologies, Inc.
1-800-826-5527
www.innotek.net

 
 
2100233-2

Track & Train Remote Trainer with Beeper

Quick Start Guide

TT-100A


Step 1 Power Up

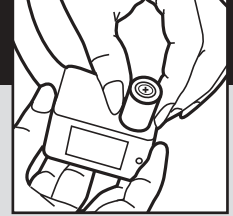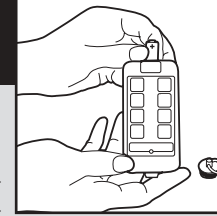

Transmitter: Insert 12v alkaline battery in the transmitter positive (+) side out. Replace metal cap. Screw antenna into the antenna port.

Receiver: Insert 3v lithium battery in the receiver positive (+) side out. Replace metal cap. The LED on the receiver will flash amber.

 Step 2 Match Components

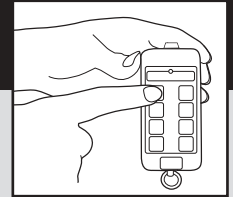

Separate components about 12-inches. Press transmitter button LOW in the left hand column within 30 seconds of powering up. The transmitter LED will flash green, indicating it is sending a signal. The receiver LED will flash red, indicating it is receiving the signal. The components now work together.

Step 3 Turning the Collar ON and OFF



 
To turn collar on or off, briefly touch the two red paper dots together (one on receiver, one on transmitter).

A magnet in the transmitter, indicated with a red paper dot, activates the receiver's ON/OFF switch, also indicated with a red paper dot.

ON – a brief solid green light and tone indicate that the collar is on, ready to use. A green light will blink while the collar is on.

OFF – A brief solid red light and tone will indicate the collar has been turned off.

Step 4 Adjust the collar

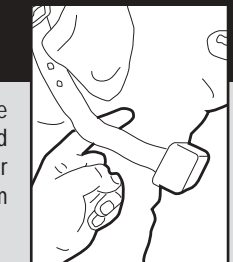

Proper Fit: The collar fit should be snug, yet loose enough to allow one finger to fit between the strap and the dog's neck. Fit is important because a loose collar may cause inconsistent performance. It's okay to trim any excess strap length.

Track & Train Remote Trainer with Beeper

Model TT-100A

Understanding the Transmitter

The handheld transmitter signals the collar receiver to produce stimulation, training tone, or beeper tone. The transmitter is water-resistant and should not be immersed in water or placed in a dishwasher.

Transmitter Buttons

1-LOW to 4-MAX. – Select any of 4 stimulation levels instantly. We recommend that you always start training your dog with the lowest stimulation, and increase to a higher level if necessary. You will know when you've reached the right level when your dog responds by twitching his head, neck or shoulders or by perking up his ears. If the dog vocalizes, you need to go to a lower level.

You control the length of the stimulation by the time you press the button. For a short stimulation, press and release the button. For a longer stimulation, hold the button down. A maximum of 10 seconds may be applied before the safety feature to prevent over-correction engages. After 10 seconds, stimulation will be locked out for another 10 seconds.

PROGRAM (On rear)– used together with buttons on the transmitter face to change ID Codes or set tone-with-correction options.

BEEPER MODES – right hand buttons let you control beeper modes, that is, how often a sound is transmitted from the collar receiver.

- Normal (Run & Point) – sounds a beep every 10 seconds while the dog is running and a beep every second while the dog is on point. There can be up to a 10-second delay in announcing the dog on point.
- Grouse (Run & Point in heavy cover) – sounds a beep every 5 seconds while the dog is running and a beep every second while the dog is on point. There can be up to a 5-second delay in announcing the dog on point.
- Silent (Point Only) – beeper is silent while the dog is running, and sounds a beep every second while the dog is on point. There can be up to a 10-second delay in announcing the dog on point.
- Locate – sounds a continuous beep for as long as the button is pressed up to a maximum of 10 seconds. The dual function of this button makes tracking easier and discontinuing the beeper function more convenient.

Your transmitter also has an LED light:

- Pulsating green light – signal is being delivered
- Solid amber light – programming mode
- Pulsating red light – low battery, replace battery soon.

Changing the ID Code

The TT-100A offers 2,048 ID codes in case you experience problems from other nearby training units. To change codes:

- Press and hold the PROGRAM button on the back of the transmitter.
- Continue pressing PROGRAM, while pressing 1-LOW on the face of the transmitter.

- Release only the PROGRAM button, while continuing to press 1-LOW.
- When the LED ceases flashing red-green, release 1-LOW.

Setting/Changing the Tone Mode

Choose from three tone options. Some trainers like to use Tone or Tone with Delay, believing that the dog will eventually associate the tone with obedience, which may make stimulation unnecessary. Consult a competent dog training professional for more on tone training.

To program tones:

1. Press and hold the PROGRAM button on the back of the transmitter.
2. Press and hold one of the following to select the tone option:
 - BUTTON 2 for tone ON with stimulation
 - BUTTON 3 for tone OFF with stimulation
 - BUTTON 4 for tone with a one-second delay before stimulation
3. While continuing to hold BUTTON 2, 3, or 4, release the PROGRAM button. The transmitter light will stay solid for a couple of seconds, and then go out.
4. As soon as the solid light goes out, release BUTTON 2, 3, or 4.

New! Additional tones

Your Track & Train system includes 8 user-selectable tones, giving you more flexibility in all tracking environments.

Hold in the Normal button for more than a second. The system will begin scrolling through the 8 unique beeper tones and volumes:

Standard Tone, Low Volume
Standard Tone, High Volume
Sweeping Tone, Low Volume
Sweeping Tone, High Volume
Warble, Low Volume
Warble, High Volume
Hawk, Low Volume
Hawk, High Volume

 
Release the Normal button when you hear the option you want to use as your default tone and volume.

Understanding the Receiver

The collar receiver produces stimulation and/or tone. The receiver is water-proof and should continue to work after being immersed in water.


The collar receiver uses a LED light to let you know the status of the receiver:

- Blinking green light – collar is on and ready to use
- Pulsating red light – stimulation is being delivered
- Blinking red light – low battery; change as soon as possible
- Solid green light – over-correction timeout; wait 10 seconds
- Blinking yellow light – collar should be matched to transmitter

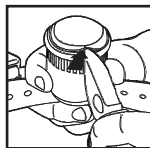

Understanding the Beeper

 The beeper is attached to the collar receiver via wires running through the collar strap. Take care not to damage these wires. The beeper is waterproof and the beeper is made of durable polymers. It requires very little maintenance

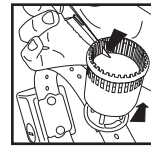

besides checking the slots and removing debris.

If debris reduces speaker volume, gently pry out the black rubber ring from the top cap of the beeper. Pull the body of the beeper upwards until the slots are above the top cap. Clean debris from slots and reassemble, setting the rubber ring in its slot.

Testing the Receiver

You may wish to test the collar from time to time. To test:

- Hold the test light provided across the receiver probes.
- Press a stimulation button 1-LOW to 4-MAX.
- Test light will illuminate.
- The intensity of the test light will increase as the level increases.

Replacement batteries

Your TT-100A transmitter uses a 12-volt alkaline battery, and the receiver uses a 3-volt lithium battery. These are commonly available where you bought your training system, where batteries are sold, or call 1-800-826-5527 to order direct from us.

Compliance with U.S. Telecommunications Regulations

This Innotek Remote Training System is designed to meet requirements set forth by United States country telecommunications authorities. Note that in some countries, use may be limited due to national frequency planning requirements. The user is responsible for respecting those rules.

Training Tips

Watch the included video to get the basics for training your dog properly with a remote trainer.

Always praise your dog for good behavior!

Teach him what the commands mean before introducing the collar as a reinforcement tool.

Keep training sessions brief, about ten minutes of training and then a rest or play period of at least equal length.

Dogs learn through repetition. You may have better training success if you can elicit an undesired behavior when you can anticipate it. For example, if the dog misbehaves and jumps on visitors, have someone come in and out of the front door several times over a half-hour period. You'll be expecting it and will be ready to teach your dog the right behavior.

Always end a training session on a positive note. Let the dog have success. This way he'll look forward to the next session.

Training should be fun for both you and your dog. Never train when you are angry. If you get frustrated during training, stop and come back to it later. Your dog will learn better when you are both relaxed.

We recommend your dog be at least six months old before starting a remote training program. You will be asking your dog to concentrate for periods of time and to remember what you have taught. Young puppies do not necessarily have the required mental development or attention span for these activities.

The goal of training is to condition your dog to respond to your verbal command under all situations. You should plan on using the collar for at least four months. A good rule is, once

started with a remote trainer, to regularly have the collar on when you take the dog out. This will ensure that he will always be imprinted with the correct response to your commands and that you are always in control.

Register Your Product

Your product can be registered on our website at www.innotek.net

Troubleshooting

If the collar appears not to be working, try the following:

- Adjust the collar strap to fit.
- Test the receiver. If no light, replace the battery.
- If the transmitter LED is out, replace the transmitter battery.
- Rematch the components as shown in the Quick Start Guide.
- Check that the probes are tightened
- Ensure that the probes are touching the dog's skin.
- If necessary, trim the dog's hair or use the longer probes to ensure proper skin contact. Never shave the dog's neck.
- Use a stronger stimulation level.

If you cannot solve the problem by following these steps, please call 1-800-826-5527.

IMPORTANT ADVICE

1. Read the complete instructions and follow all directions.

If you have any questions, please call 1-800-826-5527.

2. This device is intended for use only on dogs. Never attempt to use it for any purpose not described in this manual.

3. Never perform set-up procedures while the collar is on your dog.

4. Any collar worn for extended periods can cause a condition similar to bedsores, known as Pressure Necrosis. To reduce the possibility, you must do the following:

- Never leave the collar on the dog for more than 12 hours a day.
- Examine the dog's neck daily for any signs of a rash or a sore.
- Supervise your dog during the first 2 days of training.
- Check the fit to prevent excessive pressure; you should be able to insert one finger between the collar strap and your dog's skin.
- Wash the dog's neck area and the probes of the collar weekly with a wash cloth and mild hand soap.
- If the condition persists beyond 24 hours, see your veterinarian.

5. Always use the rubber insulators between the collar strap and probes to provide insulation in damp conditions.

6. Other collars and metal tags should be removed when using the remote training collar as they may interfere with proper operation.

7. Do not attempt to dismantle or repair any components of this system; doing so will void the warranty in full. The computerized circuitry should be serviced only by an authorized expert.

8. Realize that because dogs have unique temperaments, there is no way of knowing how your dog will react to the introduction of a remote training collar system. For the